



1625 BUTANE CHANGEOVER GAUGE

2 good reasons why you need a GASLOW

Ever Run Out Of Gas – Yes!

Have you noticed it always seems to be at the worst time, its either raining, in the middle of the night – or BOTH.
That's Annoying !

Thought You Could Smell Gas – Yes!

A potentially dangerous situation and you have no quick and reliable way of checking that everything is safe.
That's Worrying !

The GASLOW removes these problems

Leak Detection

You can carry out a quick and very effective test that checks your complete gas system for leaks.

Low Level Indicator

Provides you with visual warning of low gas levels so there will be no more surprises.

Be Sure.....Be Safe.....Fit a GASLOW

BUTANE Changeover Gauge

Allows for upgrade* of single hose system to butane manual changeover
*Extra Hose Required

- Warns of low gas supply
- Detects dangerous gas leaks
- Fits butane high pressure hoses
- Simple to install

2004 EN1949
This Gaslow will ONLY fit NEW 30mbar caravan regulators

Prod.Code 01-1625

GASLOW®

OPERATING INSTRUCTIONS. To be kept by user.

Connecting to your Gas System

- Ensure your gas supply is switched OFF at the cylinder(s).
- If fitted, disconnect your hose from your caravan regulator.
- Check your Gaslow, making sure connections are clean, free from damage and the rubber sealing washer is fitted.
- Connect the Gaslow to your caravan regulator and tighten with a spanner.
- Fit your high pressure hoses to the Gaslow in the same manner.
- Check the rubber washers then connect to your gas cylinders, securely tightening the LEFT-HAND threaded nut with a spanner.

Operating as a Leak Detector

Leak testing is quick and easy and we recommend this procedure is performed every time the gas is turned on at the cylinder.

- Ensure ALL gas appliances are turned OFF.
- Turn ON the gas on BOTH cylinders and pressurise the system. The gauge will show GREEN.
- Turn OFF the gas supply. The Gaslow will now monitor the gas pressure in your system between the gas cylinders and the appliances.


ANY LEAKS WILL BE INDICATED BY THE RED SECTOR APPEARING WITHIN 10 MINUTES.

Should there be a leak it is important to identify the source before using your gas system. Use a recommended leak detector or a soapy water solution – NEVER USE A NAKED FLAME. Testing for leaks should start at the gas cylinder working back to your appliances.

IMPORTANT: The RED sector will appear over a longer period of time because your system will not maintain gas pressure indefinitely.

Operating as a Low Level Indicator

- The Gaslow gives you warning of low gas levels ONLY when gas has been consumed for at least 10 minutes. ALWAYS ENSURE YOU ARE BURNING GAS OR HAVE JUST FINISHED WHEN READING THE GASLOW.

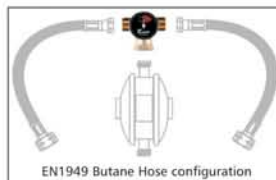

EN1949 Butane Hose configuration

- For best results we recommend a high consumption appliance such as a cooker or heater, NOT A FRIDGE OR PILOT BURNER as they consume very little gas and will give inaccurate readings and insufficient warning of gas exhaustion.

- On a low consumption appliance the gauge will indicate longer cylinder life. If a high consumption appliance were then used, the gauge would adjust to show a shorter cylinder life.

IMPORTANT: The Gaslow allows for ambient temperatures with sectors on the dial face marked "hot day", "cool day" and "cold day". Read the needle on the outer band when it's cold and the inner when it's hot.

During cold weather, the GASLOW will register in the red when there is still liquid in the cylinder. This occurs as Butane gas will not operate when temperatures fall close to freezing.

Using the LP Gas System

- Turn ON the gas supply at ONE of the cylinders.
- When consuming gas, the Gaslow Gauge will monitor the gas supply as described above. When gas is running low, the cylinder will be ready for changing.
- To change over simply turn ON the gas at the second cylinder and turn OFF the gas supply at the empty cylinder.
- The built-in non-return valve allows the empty gas cylinder to be disconnected and immediately replaced without having to turn off the gas supply.

IMPORTANT: When changing over gas cylinders, the gas system must not be left with only one gas cylinder connected when gas is turned ON at the cylinder.

European Cylinders - Butane & Propane
With a hose change you can now fit different cylinders throughout Europe and use either Butane or Propane on the 30mbar regulator.
However the pressure in a Propane cylinder is a lot higher than in a Butane cylinder so the Gaslow gauges have to be gas specific for them to operate as low level indicators. Therefore do not connect a Propane cylinder to your Butane Gauge. Although safe, it could damage its calibration. If you need to use Propane simply connect the hose directly to the Regulator.
This Gaslow is designed to fit all makes of Caravan regulators manufactured to EN 12864 with inlet M20 x 1.5

Optional adapters (for Butane cylinders)

For 7 & 15Kg cylinders, a 21mm Clip-on adapter is required. A special adapter is needed for Camping Gas cylinders.



GO
Plenty of gas



EARLY WARNING



STOP
Cylinder empty

Gaslow International Limited
Unit 1, Weldon Road
Loughborough
Leicestershire LE11 5RA
Tel 0845 4000 600
Info@gaslow.co.uk
www.gaslow.co.uk

General Safety and Operating Conditions

- Storage areas, must be well ventilated.
- Use no naked flames, cigarettes, matches etc in the vicinity when connecting, disconnecting or when operating the gas supply.
- The gas cylinder must ALWAYS be used in the upright position.
- When used outdoors the Gaslow must be suitably protected from the elements.
- Should there be any queries please contact your local dealer or Gaslow direct.

Designed for someone who has already bought a hose but would like to upgrade to have the advantages of a Gaslow and the benefits of a manual changeover system.



Made in the EEC
UK Patent No:2301895
Euro Patent No:0754294

