

# 1730 CLIP-ON GAUGE & REGULATOR



## 2 good reasons why you need a GASLOW

### Ever Run Out Of Gas – Yes!

Have you noticed it always seems to be at the worst time, its either raining, in the middle of the night – or BOTH. That's Annoying !

### The GASLOW removes these problems

#### Leak Detection

You can carry out a quick and very effective test that checks your complete gas system for leaks.

### Thought You Could Smell Gas – Yes!

A potentially dangerous situation and you have no quick and reliable way of checking that everything is safe. That's Worrying !

#### Low Level Indicator

Provides you with visual warning of low gas levels so there will be no more surprises.

**Be Sure.....Be Safe.....Fit a GASLOW**

## CLIP-ON Gauge & Regulator

- Warns of low gas supply
- Detects dangerous gas leaks
- 21mm for 7Kg & 15Kg gas cylinders
- Simple to install

Prod.Code 01-1730



### OPERATING INSTRUCTIONS.

#### To be kept by user.

#### Connecting to your Gas System

- Connect the hose feeding your appliances to the low pressure nozzle of the Gaslow and secure with a hose clip.
- Ensure the gas supply is turned OFF at all the appliances.
- Check the connections are clean and free from damage.
- Remove the seal cap from the cylinder valve. Regulator operation - Gas tap horizontal - Gas OFF. Gas tap vertical - Gas ON
- Ensure the tap is in the OFF position. Push the Gaslow down firmly and vertically onto the cylinder valve until it clicks into place.
- To remove the Gaslow, turn the gas tap OFF, push in the gas tap and lift up the regulator at the same time.

**IMPORTANT - DO NOT ATTEMPT TO CONNECT OR DISCONNECT THE REGULATOR WHEN THE TAP IS IN THE ON POSITION**

#### Operating as a Leak Detector

- Leak testing is quick and easy and we recommend this procedure is performed every time the gas is turned on at the cylinder.
- Ensure ALL gas appliances are turned OFF.
  - Turn ON the gas and pressurise the system. The gauge will show GREEN.
  - Turn OFF the gas supply. The Gaslow will now monitor the gas pressure in your system between the gas cylinder and the appliances.

**ANY LEAKS WILL BE INDICATED BY THE RED SECTOR APPEARING WITHIN 5 MINUTES.**

Should there be a leak it is important to identify the source before using your gas

system. Use a recommended leak detector or a soapy water solution – NEVER USE A NAKED FLAME. Testing for leaks should start at the gas cylinder working back to your appliances.

**IMPORTANT:** The RED sector will appear over a longer period of time because your system will not maintain gas pressure indefinitely.

#### Operating as a Low Level Indicator

- Turn ON the gas at the cylinder valve and light your appliances.
- The Gaslow gives you warning of low gas levels ONLY when gas is being consumed. ALWAYS ENSURE YOU ARE BURNING GAS WHEN READING THE GASLOW.
- The Gaslow requires an adjustment time of 5 to 15 minutes depending on your level of consumption to give the most accurate reading.
- For best results we recommend a high consumption appliance such as a cooker or heater, NOT A FRIDGE OR PILOT BURNER as they consume very little gas and will give inaccurate readings and insufficient warning of gas exhaustion.
- On a low consumption appliance the gauge will indicate longer cylinder life. If a high consumption appliance were then used, the gauge would adjust to show a shorter cylinder life.

**IMPORTANT:** The Gaslow allows for ambient temperatures with sectors on the dial face marked 'hot day', 'cool day' and 'cold day'. Read the needle on the outer band when it's cold and the inner when it's hot.

During cold weather, the Gaslow will register in the red when there is still liquid in the cylinder. This occurs as Butane gas will not operate when temperatures fall close to freezing.

push appliance hose onto inlet nozzle and secure with a clip



Made in the EEC  
UK Patent No:  
2301895



**GO**  
Plenty of gas



**EARLY WARNING**



**STOP**  
Need a refill

### General Safety and Operating Conditions

- The Gaslow regulator is designed to supply gas to appliances at a pressure and capacity as indicated on the identification label.
  - Storage areas, must be well ventilated.
  - Use no naked flames, cigarettes, matches etc in the vicinity when connecting, disconnecting or when operating the gas supply.
  - The gas cylinder must ALWAYS be used in the upright position.
  - When used outdoors the Gaslow must be suitably protected from the elements.
- Should there be any queries please contact your local dealer or Gaslow direct.



Gaslow International Ltd  
Unit 1, Weldon Road  
Loughborough  
Leicestershire LE11 5RA  
Tel 0845 4000 600  
Info@gaslow.co.uk

